

English Spell Checker

Your RadioShack English Spell Checker helps you quickly find the correct spelling for up to 30,000 words. Enter a word as you think it is spelled and the spell checker uses advanced intelligence to confirm your spelling or find the correct spelling. The spell checker also has a missing letter feature that can help you find words for games like crossword puzzles. The spell checker's built-in calculator lets you perform 8-digit standard arithmetic calculations.

Note: The spell checker comes with a battery insulation strip to prevent battery drain during shipping. Before you use the spell checker, firmly grasp the strip (sticking out of the battery compartment) and pull on the strip to remove it.

TURNING POWER ON AND OFF

To turn on the spell checker, press **POWER**. The spell checker automatically turns off 5 minutes after you stop using it. To turn it off sooner, press **POWER** again.

CHECKING WORD SPELLINGS

1. Press **POWER** (to turn on the spell checker) or **SPELL** (if you were using the calculator). **INPUT WORD** appears.
2. Enter the word you want to check, up to 16 letters, using the letter keys.

Notes:

- If you make a mistake, repeatedly press **◀** to delete the incorrect letter(s). Then enter the correct letter(s).
- To clear the entire word and start over, press **AC/CLR**.

3. Press **SPELL**. **SEARCHING** appears while the spell checker searches through the word list.

*If the word is spelled correctly, **CORRECT** appears, the spell checker beeps once, and the word reappears.*

*If the word is not spelled correctly, **NOT FOUND** appears and three beeps sound. Then **MATCHING** appears for a few seconds and the spell checker searches for and displays a list of similarly spelled words. Repeatedly press **▲** or **▼** to view the words in that list, and press **ORIG** (if desired) to review the original word.*

Note: If the word has more than 10 characters, **◀** or **▶** appear alternately, and the letters scroll off of the display.

4. Repeat Steps 2 and 3 to check another word.

FINDING MISSING LETTER(S)

This feature can help you spell out words even if you do not know all of the letters, which is great for solving crossword puzzles. Substitute a question mark (?) for the letters that are missing from the word and your spell checker searches for a list of possible words.

1. Press **POWER** (to turn on the spell checker) or **SPELL** (if you were using the calculator). **INPUT WORD** appears.
2. Enter the word (up to 16 characters) you want to spell. If you know a letter, press that letter's key to enter it, and press ? in the place of each letter you do not know.

For example, enter **H??SE**.

3. Press **SPELL**. **SEARCHING** appears while the spell checker searches through the word list, then the first suggested word and **▼** appear. For example, **HORSE** appears.
4. To view the other suggested words in the list (such as **HOUSE**), press **▼** or **▲**.

USING THE CALCULATOR

You can use the spell checker's calculator to perform 8-digit standard arithmetic calculations. Several of the letter keys (such as **U/8** and **M/=**) also function as number or operator keys for the calculator function.

To use the calculator, turn it on and press **CAL**. **CALCULATOR** appears.

Enter the numbers and operators in the order they appear in the arithmetic operation. The numbers appear on the display as you enter them, but the operators (+, −, ×, ÷, =) do not appear.

If you enter an incorrect value, press **CE/Z**, then enter the correct value and continue your calculation.

If you press an incorrect operator key (+, −, ×, ÷, =), simply press the correct key and continue your calculation.

To clear an error or clear the display for a new calculation, press **AC/CLR** or **CAL**.

ERROR appears on the display when:

- a calculation result exceeds 8 digits to the left of the decimal point.
- you try to divide by 0.

Constant Calculations

For addition, subtraction, and division, the value you enter before pressing **=** is the constant. For multiplication, the value you enter before pressing **×** is the constant.

Memory Calculations

Press **M+D** to total the current calculation and add the result to memory. **M** appears.

Press **M-X** to total the current calculation and subtract the result from memory.

Press **MRC/R** to recall the number from memory. Press **MRC** twice to clear the memory.

REPLACING BATTERIES

Your spell checker comes with two G13 button-cell batteries installed for power. When the display dims or the spell checker stops operating properly, replace the batteries. For the best operation, we recommend RadioShack silver-oxide batteries.

- 1. Remove the battery compartment cover (on the back of the spell checker) by sliding it in the direction of the arrow.
- 2. Remove the old batteries and install the new batteries with their positive sides facing up.
- 3. Replace the battery compartment cover.

Warnings:

- Keep the batteries out of the reach of children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries properly. Do not bury or burn them.

Cautions:

- Never leave dead or weak batteries in the spell checker.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries.

RESETTING THE SPELL CHECKER

If the spell checker locks up or stops operating properly (and you have installed fresh batteries), use a pointed object (such as

as a straightened paper clip) to press **RESET** on the back of the spell checker. **INPUT WORD** appears.

CARE

To enjoy your spell checker for a long time:

- Keep the spell checker dry. If it gets wet, wipe it dry immediately.
- Use and store the spell checker only in normal temperature environments.
- Handle the spell checker gently and carefully. Do not drop it.
- Keep the spell checker away from dust and dirt.
- Wipe the spell checker with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the spell checker's internal components can cause a malfunction and invalidate its warranty. If your spell checker is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Display	Liquid Crystal
Power Source	Two G13 Button Cells
Battery Life	About 9 Months
Working Temperature	32° to 139.2°F (0° to 43°C)
Dimensions (HWD)	2 ⁵ / ₁₆ × 4 × 1/2 Inches (58 × 102 × 12 mm)
Weight	1.69 oz (48 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99